

# DIGITAL DOOR LOCK

## Operation Instruction



1 2 3  
4 5 6  
7 8 9  
\* 0 #

**Password**



**Card**



**Mechanical key**



**Fingerprint**




**doorbell**



**C degree cylinder**

## Product Guide

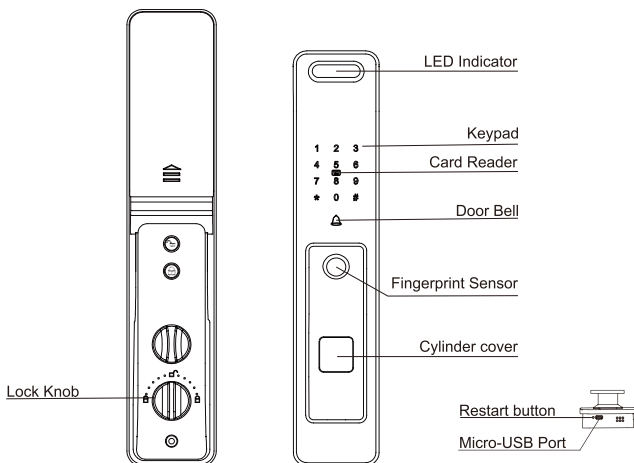

## Product specifications


Item	Specifications	Item	Specifications
Voltage	6.8-8.4V(lithium battery)	Quiescent current	< 70uA
Emergence power supply	MicroUSB	Working temperature	-20°C~ +55°C
User capacity	Fingerprint, password, card, mechanical key	Working humidity	20%~95%

## User capacity

Type		Quantity	Permission
Admin user	Password or fingerprint	9	Add, delete normal user and feature settings
Normal user	Fingerprint	291	Unlock
	Password		
	Card		

# SET

- ① Enter setting menu: press "set" and verify administrator information;
- ② Restore factory state: press "set" for 5 seconds, the system initialize automatically  
Voice prompt: Initialization successful.

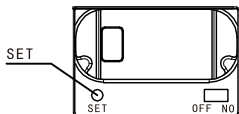

Note: after the door lock is successfully initialized, any fingerprint, card or password: 123456 can unlock the lock. All previous information has been emptied, please add admin information in time.

## Add administrator information

Add 1 admin user for first time setting (fingerprint , password or card).



Press "SET", enter add administrator information menu.



Input 6 digits password, press '#' to confirm, input password and press '#' again to confirm.



Or add fingerprint as administrator information, place finger on the sensor 4 times.

Card

Or place the card to the reader.

## Add normal information

1

Enter setting menu, press 1 for add user



Place finger 4 times to add finger.



Input 6 digits password, press '#' to confirm , input password and press '#' again to confirm.

Card



Place the card to reader. Press "\*" to exist.

## Change administrator information

After change the administrator information (any group), all the previous administrator information are covered.

4

Enter setting menu, press 4 to change administrator information.

1 2 3  
4 5 6  
7 8 9  
0

#

Input 6 digits password, press"#" to confirm, input password and press "#" again to confirm.



Or add fingerprint as administrator information, place finger on the sensor 3 times.

Card

Or place the card to the reader.

## Delete user

2

Enter setting menu: press 2.

1

\*

Press 1 to delete single user with user number.

## Double unlock mode

For better security, you can set up the lock to double unlocking mode. When the lock is under double unlocking mode, you have to input 2 registered users every time for unlocking.

3

Enter setting menu: press 3.

1

\*

Press 1, successful setting, press "\*" to exist.

## Volume setting

3

Enter setting menu: press 3.

2

Press 2, enter volume setting.

1

2

\*

Press 1 or 2 to adjust volume, 2 for decrease volume, 1 or increase volume. Press "\*" to exist.