

# DIGITAL DOOR LOCK

## Operation Instruction



1 2 3  
4 5 6  
7 8 9  
\* 0 #

Password



Card



Mechanical key



Fingerprint




doorbell



C degree cylinder

## Product Guide

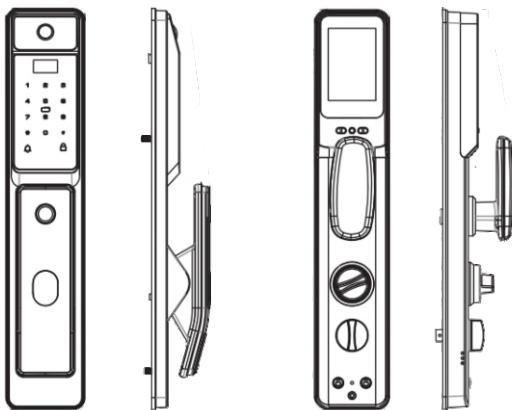

## Product specifications

Item	Specifications	Item	Specifications
Voltage	7.4V(lithium battery)	Quiescent current	< 80~120uA
Emergence power supply	MicroUSB	Working temperature	-20°C~+55°C
User capacity	Fingerprint, password, card, mechanical key	Working humidity	20%~95%

## User capacity

Type		Quantity	Permission
Admin user	Password	10	Add, delete normal user and feature settings
Normal user	Fingerprint	100	Unlock
	Password	250	
	Card		

## SET

- ①Enter setting menu: press "set" and verify administrator information;
- ②Restore factory state: press "set" for 5 seconds, and press "#" to confirm, the system initialize automatically.

Voice prompt: Initialization successful.



Note: after the door lock is successfully initialized, any fingerprint, card or password: 123456 can unlock the lock. All previous information has been emptied, please add admin information in time.

## Add administrator information

Add 1 admin user for first time setting (password).



Press "SET", enter add administrator information menu.



Input 6 digits password, press '#' to confirm, input password and press '#' again to confirm.

## Add user

1

Enter setting menu, press 1 for add user

1

Press 1 for add admin user, press 2 for add normal user



Place fingerprint for 4 times



Input 6 digits password, press '#' to confirm, input password and press '#' again to confirm.

Card

\*

Place the card to reader. Press "\*" to exist.

## Delete user

2

Enter setting menu: press 2.

1

Press 1 to delete single user .

2

Press 2 to delete single user with user number .

## Time setting

3

Enter setting menu: press 3.

1

Press 1 to set time .

Enter the time: 20\_/\_/\_  
\_:\_

## Installation settings

3

Enter setting menu: press 3.

2

Press 2 to set door lock .

### (1) Opening direction setting

1.Opening direction setting  
2.Automatic lock  
3.Lock setting

press 1

1.Right turn  
2.Left turn

### (2) Automatic lock

1.Opening direction setting  
2.Automatic lock  
3.Lock setting

press 2

1. high  
2. Medium  
3. low  
4. off

### (3) Lock setting

1.Opening direction setting  
2.Automatic lock  
3.Lock setting

press 3

1. Broalarm[ON/OFF]  
2. Tors Set [L/M/H]  
3. LockBack [2-9S]  
4. EnMotor[ ON/OFF]

# Network Setting

3

Enter setting menu: press 3.


3

Enter setting menu: press 3.


1

Press 1


1. Voice prompt "Network configuration, please wait"
2. Download app "Usmart go" and register

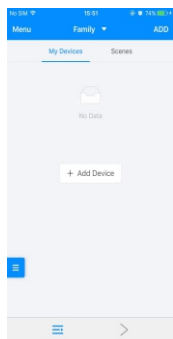


Open "Usmart go" app,  
click "+Add device"

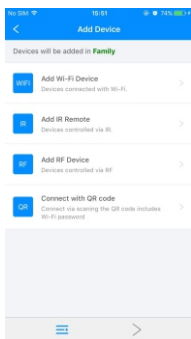


Click "Add Wi-Fi device"

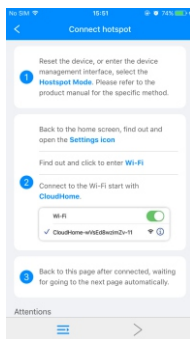


Connect hotspot

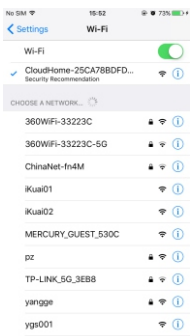


Connect to Wi-Fi :  
CloudHome and  
back to app.

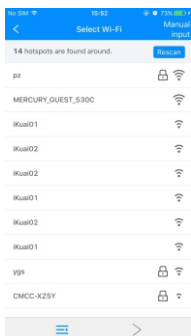

Select Wi-Fi

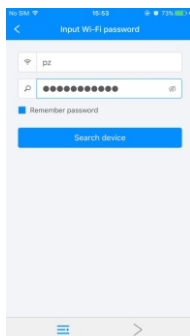


Input Wi-Fi password

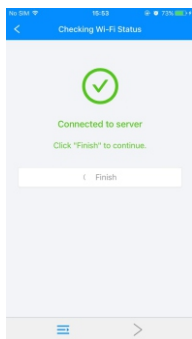


Succeed


## Remote unlock

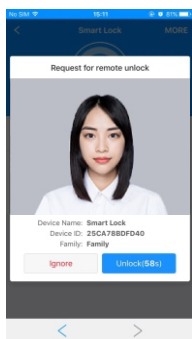

Press the lock doorbell, and the app will receive request to unlock

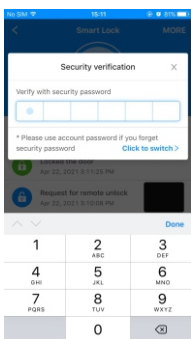

Input security password

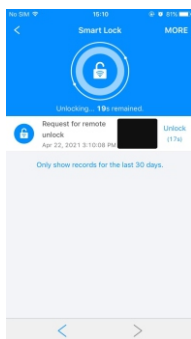

Unlock successfully

## Double unlocking mode

3

Enter setting menu, press 3 for system setting

3

Enter system setting, press 3 for function setting

2

Enter function setting, press 2 for double unlock setting, 1 for disable, 2 for enable

## Check unlocking records

4

Enter setting menu, press 4 for language and records

2

Press 2 for read records

Press 1 for check by order  
Press 2 for check by time

## Voice setting

4

Enter setting menu, press 4 for language and records

4

Press 4 for voice setting

Press 1 for enable voice  
Press 2 for disable voice